

Updating Firmware

You must own a PC to update the firmware. Sorry, Linux products are currently not supported.

Updating on Windows products:

1. You can contact your reseller to obtain the update firmware.
2. **Important Note: Close all of other applications while running the firmware update. This will insure the upgrade process will not be interrupted.**
3. Launch the IP Tools application, and locate the device on your network. Reference Figure . Select the Upgrade button to begin the firmware upgrade. As shown in this figure, the IP address of the device is 192.168.0.7. Make a note of your IP address (your results will vary).

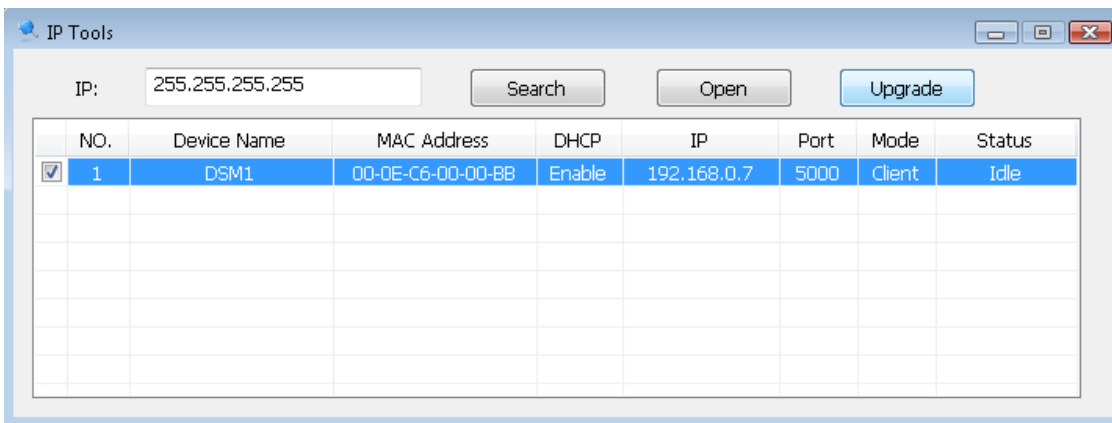


Figure 1

4. Reference Figure 2. Select the **Select File** button, and browse to the location of the file

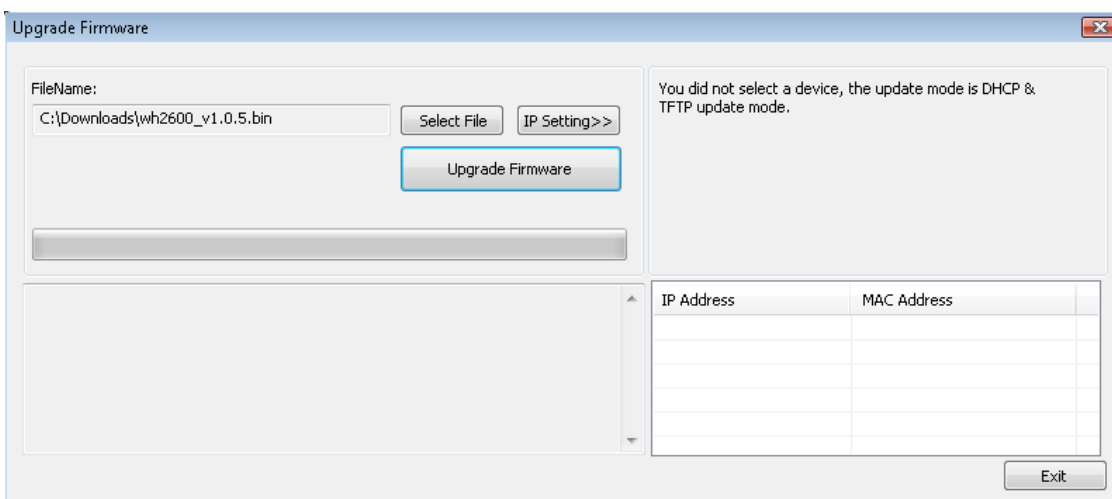


Figure 2

5. Select the Upgrade **Firmware** button. The dialog box will display **Received a Read Request** from the device. A green progress bar will provide you with the upgrade status.

DO NOT OPERATE THE MOUSE OR KEYBOARD WHEN UPGRADING to prevent interruption of

the upgrade.

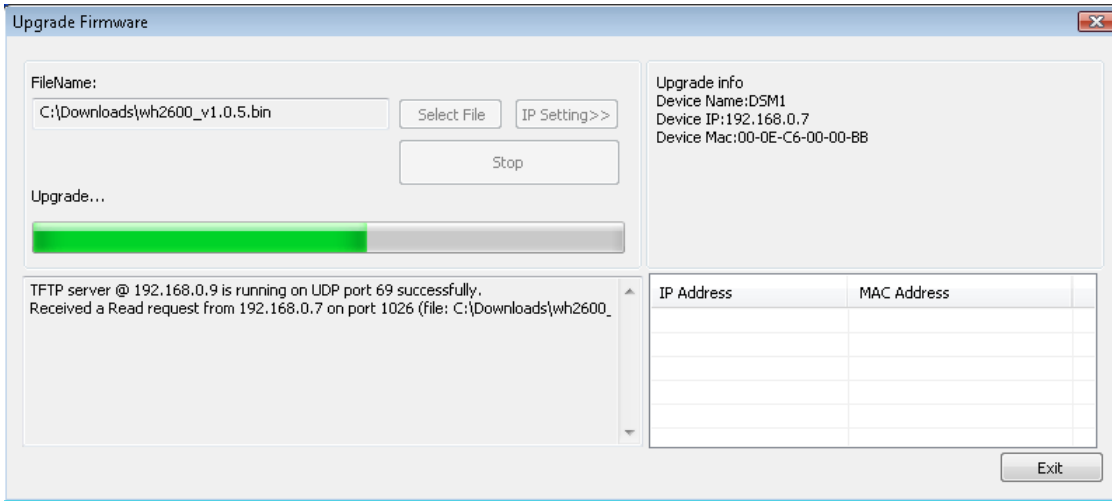


Figure 3

6. Once the firmware upgrade is complete, the dialog box will display **Read session is completed successfully**, as shown in Figure .

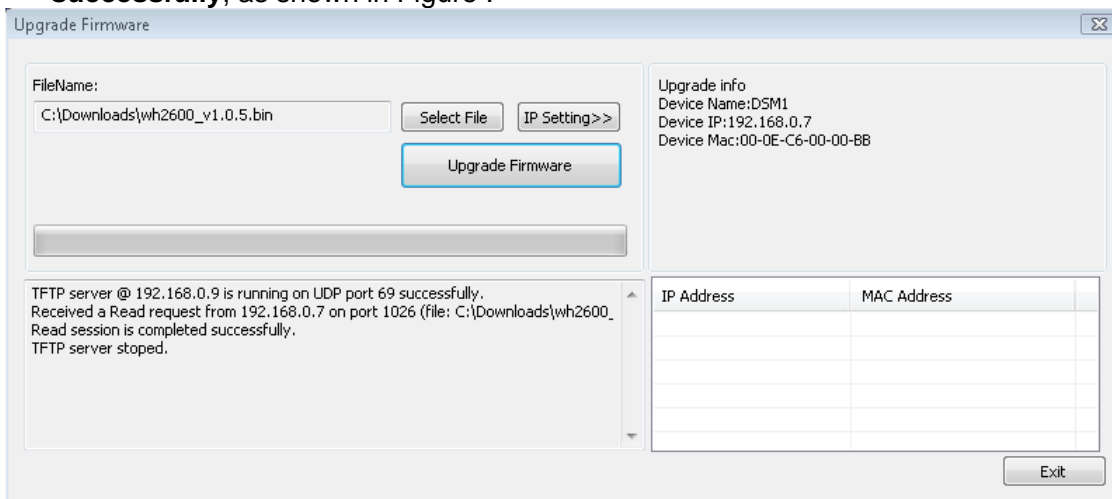


Figure 4

7. Wait about one minute for the device to reboot. You can now **Exit** the upgrade window, and access the module again.

You may be required to enter some settings, so check all of the panels for completeness.