

FOR A GOOD REASON

GRUNDIG

**VOLUME
HOOD DRYER**

HS 6780

en



SAFETY

Please note the following instructions when using the appliance:

- The appliance is designed for domestic use only.
- Never use the appliance in the bath, shower or over a wash basin filled with water; nor should it be operated with wet hands.



- Do not immerse the appliance in water or let it come into contact with water, even during cleaning.
- Do not use the appliance near water in bathtubs, wash basins or other vessels.
- If the appliance is used in the bathroom, it is essential that the power plug is pulled out after use, as water close to the appliance can still constitute a danger, even if the appliance is switched off.

- If not already present, for additional protection it is recommended to install a residual-current-operated protective device (RCD) with a rated residual operating current not exceeding 30 mA in the electrical circuit of your bathroom. Ask your plumber for advice.
- Never cover the air inlet grille.
- Never cover the appliance, for example with a towel.
- Never place the appliance on soft cushions or blankets during operation.
- Never take off the hood dryer during operation. Always switch off the appliance first.
- Pull out the power plug after use. Do not pull out the plug by pulling on the cable.
- Never use the appliance if it or the power cord is visibly damaged.

SAFETY

- If the power cord is damaged, it must be replaced by the manufacturer, its service centre or a similarly qualified person to prevent danger arising.
- Keep the appliance away from children.
- The device may not be used by the following people, including children: those with limited physical, sensory or mental capabilities and also those with a lack of experience and knowledge. This does not apply to the latter if they were instructed in the use of the device or if they use it under the supervision of a person responsible for safety. Children should always be supervised to ensure that they do not play with the device.
- Never open the appliance under any circumstances. No warranty claims are accepted for damage caused by incorrect handling.

Unfold page 2 so that you have the illustration in front of you.

Controls

- A** Power cord.
- B** Air inlet grille.
- C** Blower.
- D** On and off switch with two temperature levels and one cold setting.
- E** Adjustable strap.
- F** Hood dryer.

A responsible approach!



GRUNDIG focuses on contractually agreed social working conditions with fair wages for both internal employees and suppliers, as well as on the efficient use of raw materials with continual waste reduction of several tonnes of plastic each year – and availability of at least 5 years for all accessories.

For a future worth living.

For a good reason. Grundig.

Special features

Your appliance features special ion technology to ensure lasting vitality for your hair.

The appliance produces negative ions which neutralise the positive ions in your hair. This prevents static electricity in your hair, making it easier to style. Individual water droplets are broken up into tiny particles. This means your hair dries faster and more gently giving it suppleness and a healthy sheen.

The appliance is equipped with an overheating protection system. If the air inlet grille is blocked, the appliance switches off automatically. Set the switch to position 0 and leave the appliance to cool down for about 10 minutes.

OPERATION

Use

Check if the mains voltage on the type plate of the appliance corresponds to your local mains supply. The only way to disconnect the appliance from the mains is to unplug the power cord.

Towel dry your hair after washing. Curl your hair with the curler in the usual way.

- 1 Pull out strap **E** and place it around the neck.
- 2 Put on hood dryer **F**.
- 3 Plug power cord **A** into the wall socket.
- 4 Switch on the appliance by setting **D** to position 1 or 2.
 - Settings: temperature level 1, temperature level 2, cold setting C, switch off 0.
- 5 Adjust strap **E** so that the hood dryer is just above the hair and not pressing down on the hair.

- 6 After drying, set **D** to position C.
 - The cold setting makes the dried curls hold for longer.
- 7 Move **D** to position 0 to switch off the device.
- 8 Pull out power cord **A** from the wall socket.
- 9 Take off the hood dryer and strap.

Caution

- Never wind the power cord around the appliance, as this can result in damage.
Check the power cord and the appliance regularly for visible damage.

OPERATION

Storage

If you do not want to use the appliance for a long period of time, please store it carefully.

- 1** Always pull out the plug after use.
- 2** Leave the appliance to cool down completely.
- 3** Store the appliance in a safe place.

Cleaning and care

Pull the plug out before cleaning.

Never submerge the appliance in water.

Use a soft, dry cloth to clean the appliance.

INFORMATION

Environmental note

This product has been made from high-quality parts and materials which can be re-used and recycled.

Therefore, do not throw the product away with normal household waste at the end of its service life. Take it to a collection point for recycling electrical and electronic devices.

This is indicated by this symbol on the product, in the operating manual and on the packaging.



Please find out about collection points operated by your local authority.

Help protect the environment by recycling used products.

Technical data



This product fulfils the European directives 2004/108/EC, 2006/95/EC and 2009/125/EC.

Power supply

220-240 V~, 50/60 Hz

Power

600 W



Technical and design modifications reserved.