

Technaxx® Video Watch Actionmaster 8GB

User Manual

The Declaration of Conformity for this device is under the Internet link: www.technaxx.de/ (in bottom bar "Konformitätserklärung"). Before using the device the first time, read the user manual carefully.

Service phone No. for technical support: 01805 012643 (14 cent/minute from German fixed-line and 42 cent/minute from mobile networks). Free Email: support@technaxx.de

1. Charging

1.1. Charging the built-in Lithium battery either by connecting the USB interface of the watch with the USB port of a computer/notebook or with the AC adapter.

1.2. If the watch is connected, the red LED lights up briefly.

1.3. During charging, the red LED lights constantly and the blue LED flashes. [Therefore both LEDs are located next to each other, it looks for the viewer as if a violet LED flashes. However, this is a colour mix only.]

1.4. When the watch is fully charged after approx. 2 – 2,5 hours, the red LED and blue LED are lighting constantly. [Therefore both LEDs are located next to each other, it looks for the viewer as if a violet LED flashes. However, this is a colour mix only.]

2. Low battery power

If the battery power is too low while recording a video or taking pictures, the blue LED flashes quickly. Before the camera turns off automatically, the files will be saved.

3. Buttons



1	Power button	Press and hold down the button to turn on / to turn off
	Video button	Press shortly the button to take a video
2	Photo button	Press shortly the button to take a picture
3	USB interface	
4	Camera lens	
5	Microphone	
6	LED indicator (small window)	
7	Time setting	

4. Turning ON the camera

Press and hold down the Power/Video button for 2 seconds. The red LED lights up briefly. Then the red LED turns off while the blue LED is lighting. That indicates power on and standby mode of the watch.

5. Turning OFF the camera

In the standby/video mode press and hold down the Power/Video button. The red LED flashes for 3 times and then turns off. When the watch is not used 3 minutes after powered on, it will power off automatically.

6. Recording a video

6.1. In the standby/video mode mode press the Power/Video button. The blue LED flashes for 3 times and then turns off. The video recording begins. Meanwhile press shortly any button, the blue LED flashes for 3 times and reminds you that video recording is running.

6.2. Press the Power/Video button 2 times to end video recording.

6.3. If the Power/Video button is pressed down a while, the video will be saved and the camera will turn off. The red LED will flash 3 times quickly.

Attention: In case there is not enough memory left, the red and blue LED will flash quickly. After 5 seconds the camera turns off automatically.

7. Taking a picture

7.1. In the standby mode press shortly the Photo button. The red LED flashes shortly and a picture will be saved in JPEG format.

7.2. Then the red LED turns off and the blue LED remains lighting, which indicates that the camera is still turned on and in standby mode.

8. Separate sound recording

8.1. In the standby mode press and hold down the Photo button for 2 seconds. The red LED flashes slowly 3 times and sound recording begins. Press the Photo button 2 times to end the sound recording.

8.2. If the Power/Video button is pressed down for a longer time, sound recording will be saved and the camera will turn off. The red LED flashes 3 times quickly.

9. RESET

When the system crashes down, do a RESET to restart the system. Press down the Power/Video button (1) **together with** the Photo button (2) at the same time.

10. Connection with a computer

10.1. Use the USB cable to connect the watch to the PC/Notebook USB port. After that a "removable disk" occurs on the computer. (If the watch is connected to the PC/Notebook, the watch begins to work as a removable disk.) Video can now be checked, data can be easily saved, transferred, copied and deleted.

10.2. Update date and time of a video

Connect the watch with a PC/notebook and in the root directory of the watch create a txt.file named „**time.txt**“. Open this file and then edit the text file.

Example: 2014 03 03 10:30:00 (YEAR MONTH DATE only enter with spaces, means without any dot, hyphen or minus sign!)

Then close the program and disconnect the USB connection. When the watch is turned on next time, date and time will be updated automatically. On the recorded video or picture date and time are displayed as follows: 2014.03.03. 10:30:28

10.3. Quit USB device:

- a. Double-click on the Windows Interface Icon "Safely Remove Hardware" (lower right corner of the green arrow).
- b. Select "Stop" in the "Safely Remove Hardware" dialog box.
- c. Choose the device to stop and then click on "OK". The "Safely Remove Hardware" dialog box shows: "USB Mass Storage Device can now be safely removed from the system" in the lower right corner of the green arrow.
- d. Close the "Safely Remove Hardware" dialog box.
- e. Disconnect the USB device from the PC/Notebook.

11. FAQs

11.1. Cannot turn on the watch: Check if the battery power. If it is too low, charge the battery.

11.2. Cannot upload / download files normally:

- a. Check that the USB cable between the USB device and the PC/Notebook is not damaged and whether the connection is established.
- b. Check if there is enough storage space to save the file.

12. Technical specifications

Video resolution: 640 x 480 with 30fps (AVI format)
Photo resolution: 1600 x 1200 pixels (JPEG format)
Very small camera lens in the dial
Built-in 8GB flash memory / USB 1.1 interface
Built-in rechargeable lithium polymer 200mAh battery with 3.7V
Charging time battery ~ 2 – 2,5 hours
Recording time battery ~ 90 – 100 minutes
Operating Systems: Windows 8.1 / 8 / 7 / Vista / XP / 2000 / MAC OS 9.2.2 or higher
Lenght 24 cm (watch with strap)
Weight / Dimensions: 85 g / (L) 4,8 x (W) 1,6 x (H) 5,0 cm (without strap)
Package Contents: Video Watch Actionmaster 8GB, USB cable, USB adapter (for charging), User Manual

Security and Disposal Hints for Batteries: Hold children off batteries. When a child swallowed a battery go to a doctors place or bring the child into a hospital promptly! Look for the right polarity (+) and (--) of batteries! Always change all batteries. Never use old and new batteries or batteries of different types together. Never short, open, deform or load up batteries! **Risk of injury!** Never throw batteries into fire!

Risk of explosion!



Hints for Environment Protection: Packages materials are raw materials and can be recycled. Do not disposal old devices or batteries into the domestic waste. **Cleaning:** Protect the device from contamination and pollution (use a clean drapery). Avoid using rough, coarse-grained materials/solvents/other aggressive cleaner. Wipe the cleaned device. **Important Notice:** Should battery fluid leak from a battery, wipe the battery-case with a soft cloth dry. **Distributor:** Technaxx Deutschland GmbH & Co.KG, Kruppstr. 105, 60388 Frankfurt a.M., Germany