


Manual

WD-34

Item no. 44-02345 | 44-02346 | 44-02347

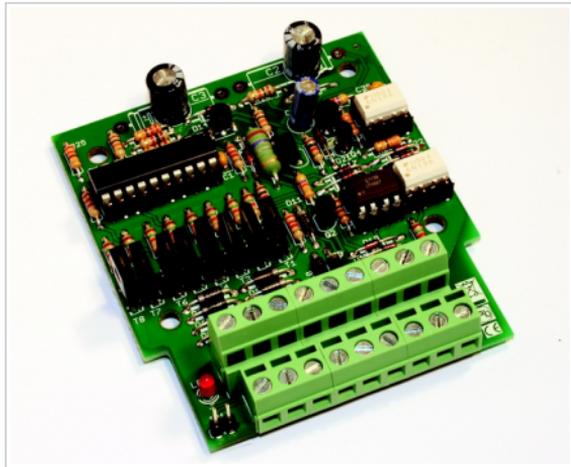

4-fold Points Decoder

MM

DCC

RailCom

tams elektronik



Table of Contents

1. Getting started	3
2. Safety instructions.....	5
3. Safe and correct soldering.....	7
4. Operation overview.....	9
5. Technical specifications.....	11
6. Assembling the kit	12
7. Connecting the WD-34.....	21
8. Programming the WD-34.....	23
9. Check list for troubleshooting.....	26
10. Guarantee bond.....	28
11. EU declaration of conformity.....	29
12. Declarations conforming to the WEEE directive.....	29

© 05/2013 Tams Elektronik GmbH

All rights reserved. No part of this publication may be reproduced or transmitted in any form or by any means, electronic or mechanical, including photocopying, without prior permission in writing from Tams Elektronik GmbH.

Subject to technical modification.

Remark: RailCom[®] is the registered trademark of the Lenz Elektronik GmbH, Hüttenbergstraße 29, D-35398 Gießen. To increase the text's readability we have refrained from referring to this point in each instance.

1. Getting started

How to use this manual

This manual gives step-by-step instructions for safe and correct assembly of the kit and fitting and connecting of the ready-built module, and operation. Before you start, we advise you to read the whole manual, particularly the chapter on safety instructions and the checklist for trouble shooting. You will then know where to take care and how to prevent mistakes which take a lot of effort to correct.

Keep this manual safely so that you can solve problems in the future. If you pass the kit or the ready-built module on to another person, please pass on the manual with it.

Intended use

The points decoder WD-34 is designed to be operated according to the instructions in this manual in digital model railway layouts. Any other use is inappropriate and invalidates any guarantees.

The WD-34 should not be assembled or mounted by children under the age of 14.

Reading, understanding and following the instructions in this manual are mandatory for the user.



Caution:

The WD-34 contains integrated circuits. These are very sensitive to static electricity. Do not touch components without first discharging yourself. Touching a radiator or other grounded metal part will discharge you.

Checking the package contents

Please make sure that your package contains:

- one kit, containing the components listed in the parts list and one PCB or
- one ready-built module or
- one ready-built module in a housing (complete unit),
- one jumper for programming the address,
- a CD (containing the manual and further information).

Required materials

For assembling the kit you need:

- an electronic soldering iron (max. 30 Watt) or a regulated soldering iron with a fine tip and a soldering iron stand,
- a tip-cleaning sponge,
- a heat-resistant mat,
- a small side cutter and wire stripper,
- as necessary a pair of tweezers and long nose pliers,
- electronic tin solder (0,5 mm. diameter).

In order to connect the module you need wire. Recommended diameters: $\geq 0,25 \text{ mm}^2$ for all connections.

2. Safety instructions

Mechanical hazards

Cut wires can have sharp ends and can cause serious injuries. Watch out for sharp edges when you pick up the PCB.

Visibly damaged parts can cause unpredictable danger. Do not use damaged parts: recycle and replace them with new ones.

Electrical hazards

- Touching powered, live components,
- touching conducting components which are live due to malfunction,
- short circuits and connecting the circuit to another voltage than specified,

impermissibly high humidity and condensation build up can cause serious injury due to electrical shock. Take the following precautions to prevent this danger:

- Never perform wiring on a powered module.
- Assembling and mounting the kit should only be done in closed, clean, dry rooms. Beware of humidity.
- Only use low power for this module as described in this manual and only use certified transformers.
- Connect transformers and soldering irons only in approved mains sockets installed by an authorised electrician.
- Observe cable diameter requirements.
- After condensation build up, allow a minimum of 2 hours for dispersion.
- Use only original spare parts if you have to repair the kit or the ready-built module.

Fire risk

Touching flammable material with a hot soldering iron can cause fire, which can result in injury or death through burns or suffocation. Connect your soldering iron or soldering station only when actually needed. Always keep the soldering iron away from inflammable materials. Use a suitable soldering iron stand. Never leave a hot soldering iron or station unattended.

Thermal danger

A hot soldering iron or liquid solder accidentally touching your skin can cause skin burns. As a precaution:

- use a heat-resistant mat during soldering,
- always put the hot soldering iron in the soldering iron stand,
- point the soldering iron tip carefully when soldering, and
- remove liquid solder with a thick wet rag or wet sponge from the soldering tip.

Dangerous environments

A working area that is too small or cramped is unsuitable and can cause accidents, fires and injury. Prevent this by working in a clean, dry room with enough freedom of movement.

Other dangers

Children can cause any of the accidents mentioned above because they are inattentive and not responsible enough. Children under the age of 14 should not be allowed to work with this kit or the ready-built module.



Caution:

Little children can swallow small components with sharp edges, with fatal results! Do not allow components to reach small children.

In schools, training centres, clubs and workshops, assembly must be supervised by qualified personnel.

In industrial institutions, health and safety regulations applying to electronic work must be adhered to.

3. Safe and correct soldering



Caution:

Incorrect soldering can cause dangers through fires and heat. Avoid these dangers by reading and following the directions given in the chapter **Safety instructions**.

- Use a small soldering iron with max. 30 Watt or a regulated soldering iron.
- Only use electronic tin solder with flux.
- When soldering electronic circuits never use soldering-water or soldering grease. They contain acids that can corrode components and copper tracks.
- Insert the component connecting pins of into the PCB's holes as far as possible without force. The components should be close to the PCB's surface.
- Observe correct polarity orientation of the parts before soldering.
- Solder quickly: holding the iron on the joints longer than necessary can destroy components and can damage copper tracks or soldering eyes.
- Apply the soldering tip to the soldering spot in such a way that the part and the soldering eye are heated at the same time. Simultaneously add solder (not too much). As soon as the solder becomes liquid take it away. Hold the soldering tip at the spot for a few seconds so that the solder flows into the joint, then remove the soldering iron.
- Do not move the component for about 5 seconds after soldering.

- To make a good soldering joint you must use a clean and unoxidised soldering tip. Clean the soldering tip with a damp piece of cloth, a damp sponge or a piece of silicon cloth.
- Cut the wires after soldering directly above the soldering joint with a side cutter.
- After placing the parts, please double check for correct polarity. Check the PCB tracks for solder bridges and short circuits created by accident. This would cause faulty operation or, in the worst case, damage. You can remove excess solder by putting a clean soldering tip on the spot. The solder will become liquid again and flow from the soldering spot to the soldering tip.

4. Operation overview

The points decoder WD-34 is designed to control solenoid articles, activated by a short switching impulse, e.g.

- coil driven points,
- semaphore signals with twin coil drive,
- decouplers.

With one WD-34 you can control a maximum of:

- four points or semaphores with twin coil drive or
- eight other solenoid articles.

Driving the decoder

The decoder's outputs are operated via accessory decoder commands in DCC or Motorola format, sent from the central unit to one of the four accessory decoder's addresses. The decoder automatically recognizes the commands' data format. It is possible to switch the outputs via mixed DCC and Motorola commands as well as to operate one output alternately in DCC and Motorola format.

Programming

Using a DCC central unit the decoder address and the decoder's features can be defined by programming the configuration variables (CV). It is also possible to set the address by using a programming jumper.

When using a Motorola central unit the decoder address has to be set with a programming jumper. Changing the other decoder's features is neither necessary nor possible in layouts run in Motorola format only.

Feedback

The points decoder WD-34 is RailCom compatible, i.e. the decoder is able to pass the RailCom messages via the rails to special RailCom detectors. This allows e.g. to feedback the correct performance of setting and switching commands or the actual setting of points.

Power supply

The points decoder WD-34 can either be supplied by the central unit or a booster. In order to release the digital electric circuit it is also possible to supply the decoder by a transformer of it's own.

5. Technical specifications

Data format	DCC, Motorola
Address range	MM: 1020 DCC: 2040 Hint: The address range to be used also depends from the control unit.
Feedback log	RailCom
Supply voltage	Digital voltage of the central unit or 14 – 20 V a.c. voltage
Current consumption (without connected devices) approx.	40 mA
Number of outputs	8
Max. total current	3.000 mA
Max. current per output up to 2 seconds persistent	1.500 mA 800 mA
Protected to	IP 00
Ambient temperature in use	0 ... +60 °C
Ambient temperature in storage	-10 ... +80 °C
Comparative humidity allowed	max. 85 %
Dimensions of the PCB (approx.)	72 x 82 mm
Dimensions including housing (approx.)	100 x 90 x 35 mm
Weight of the assembled board (approx.)	58 g
Weight including housing (approx.)	106 g

6. Assembling the kit


You can skip this part if you have purchased a ready-built module or device.

Preparation

Put the sorted components in front of you on your workbench.

The separate electronic components have the following special features you should take into account in assembling:

Resistors

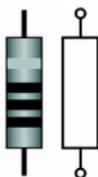

Resistors reduce current.

The value of resistors for smaller power ratings is indicated through colour rings. Every colour stands for another figure.

Carbon film resistors and some types of wire resistors have 4 colour rings. The 4th ring (given in brackets here) indicates the tolerance of the resistor (gold = 5 %).

Value:	Colour rings:
0,27 Ω	red - violet - silver (gold)
33 Ω	orange – orange – black (gold)
100 Ω	brown - black - brown (gold)
220 Ω	red - red - brown (gold)
1 k Ω	brown - black - red (gold)
1,5 k Ω	brown - green - red (gold)
2,2 k Ω	red - red - red (gold)
4,7 k Ω	yellow - violet - red (gold)
10 k Ω	brown - black - orange (gold)


Ceramic capacitors



Among other things ceramic capacitors are used for filtering interference voltages or as frequency determining parts. Ceramic capacitors are not polarized.

Normally they are marked with a three-digit number which indicates the value coded. The number 104 corresponds to the value 104.


Electrolytic capacitors

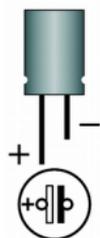

Electrolytic capacitors are often used to store energy. In contrast to ceramic capacitors they are polarized. The value is given on the casing.

Electrolytic capacitors are available with different voltage sustaining capabilities. Using an electrolytic capacitor with a voltage sustaining capability higher than required is always possible.

Diodes and Zener diodes

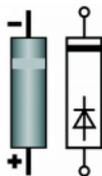

Diodes allow the current to pass through in one direction only (forward direction), simultaneously the voltage is reduced by 0,3 to 0,8 V. Exceeding of the limit voltage always will destroy the diode, and allow current to flow in the reverse direction.

Zener diodes are used for limiting voltages. In contrast to "normal" diodes they are not destroyed when the limit voltage is exceeded.

The diode type is printed on the body.


Light emitting diodes (LEDs)



When operated in the forward direction the LEDs light. They are available in several different versions (differing in colour, size, form, luminosity, maximum current, voltage limits).

Light emitting diodes should always be connected via a series resistor which limits the current and prevents failure.

Transistors

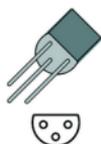


Transistors are current amplifiers which convert low signals into stronger ones. There are several types in different package forms available. The type designation is printed on the component.

Transistors for a low power rating (e.g. BC types) have a package in form of a half cylinder (SOT-Gehäuse). Transistors for a high power rating (e.g. BD types) have a flat package (TO-package), which is in use in different versions and sizes.

The three pins of bipolar transistors (e.g. BC and BD types) are called basis, emitter and collector (abbreviated with the letters B, E, C in the circuit diagram).

Integrated circuits (ICs)

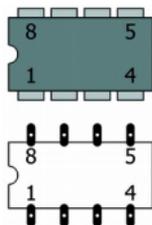

Depending on the type, ICs fulfil various tasks. The most common housing form is the so-called "DIL"-housing, from which 4, 6, 8, 14, 16, 18 or more "legs" (pins) are arranged along the long sides.

ICs are sensitive to damage during soldering (heat, electrostatic charging). For that reason in the place of the ICs IC sockets are soldered in, in which the ICs are inserted later.

Microcontrollers

Microcontrollers are ICs, which are individually programmed for the particular application. The programmed controller are only available from the manufacturer of the circuit belonging to it.

Opto couplers

Opto couplers are ICs, which work similar to laser beam switches. They combine in one housing a light emitting diode and a photo transistor. Their task is the transmission of information without galvanic connection. They are in a DIL-housing with at least 4 pins.

Terminal strips


Terminal strips are solder-in screw-type terminals. They provide a solder-free and safe connection of the cables to the circuit, which can still be separated any time.

Parts list

Carbon film resistors 0,25 W	R20, R26	33 Ω
	R18, R27	100 Ω
	R23, R25	220 Ω
	R6, R19, R22	1 k Ω
	R8, R9, R10, R11, R12, R13, R14, R15, R17	1,5 k Ω
	R1, R3, R7	2,2 k Ω
	R21, R24	4,7 k Ω
	R2, R5, R16	10 k Ω
Wire resistors 1 W	R4	0,27 Ω
Ceramic capacitors	C1, C6, C39	100 nF
Electrolytic capacitors	C10	100 μ F/25V
	C2, C3 (radial) or C4, C5 (axial)	220 μ F/25V
Diodes	D1, D2, D3, D4, D5, D6, D7, D8, D9, D10, D11	1N400x, x=2...7
	D15, D16, D17, D18, D19, D21, D22, D23, D24	1N4148
Zener diodes	D13, D20	ZPD5V1
	D14	ZPD47V
LEDs	LED1	LED 3mm
Transistors for a low power rating	Q2	BC327
	Q3	BC337
	Q1, Q4, Q5	BC557B
Transistors for a high power rating	T1, T2, T3, T4, T5, T6, T7, T8	BD680
Microcontrollers	IC1	PIC16F690P

Opto couplers	OK1, OK4	6N136
	OK2, OK3	PC817 (2 pieces) or PC827 (1 piece)
IC-sockets	IC1	20-pole
	OK1, OK4, OK2/OK3	8-pole
Double terminal strips	X4	2 x 9-pole
Solder pins	JP1	2-pole

Fig.1 : PCB layout

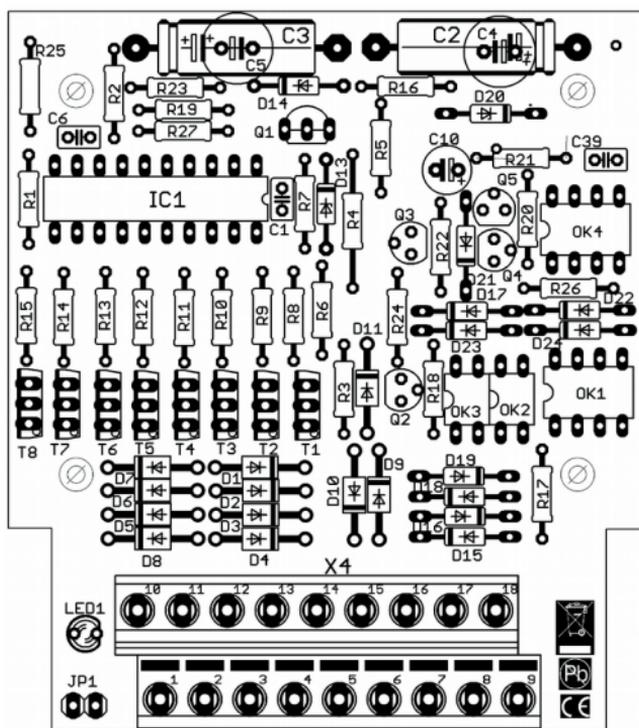

Assembly

Proceed according to the order given in the list below. First solder the components on the solder side of the PCB and then cut the excess wires with the side cutter. Follow the instructions on soldering in section 3.



Caution: Several components have to be mounted according to their polarity. When soldering these components the wrong way round, they can be damaged when you connect the power. In the worst case the whole circuit can be damaged. At the best, a wrongly connected part will not function.

1.	Resistors (except R4)	Mounting orientation of no importance.
2.	Diodes, Zener diodes	Observe the polarity! The negative end of the diodes is marked with a ring. This is shown in the PCB layout.
3.	Ceramic Capacitors	Mounting orientation of no importance.
4.	Resistor R4	
5.	IC sockets	Mount the sockets that way, the marking on the sockets show in the same direction as the markings on the PCB board.
6.	Light emitting diodes (LEDs)	Observe the polarity! With wired LEDs the longer lead is always the anode (positive pole).
7.	Transistors for a low power rating	Observe the polarity! The cross section of transistors for a low power rating in SOT-packages is shown in the PCB layout.

8.	Solder pins	
9.	Transistors for a high power rating	Observe the polarity! With transistors for a high power rating in TO packages (e.g. BD types) the unlabelled back side is marked in the PCB layout by a thick line.
10.	Electrolytic capacitors	Observe the polarity! One of the two leads (the shorter one) is marked with a minus sign. The PCB has to be inserted either with two radial electrolytic capacitors 220 μF (C2 and C3) or with two axial electrolytic capacitors 220 μF (C4 and C5) depending on the package contents.
11.	Terminal strips	Put together the terminal strips before mounting them.
12.	ICs in DIL-housing	Insert the ICs into the soldered socket. Do not touch the ICs without first discharging yourself by touching a radiator or other grounded metal parts. Do not bend the "legs" when inserting them into the sockets. Check that the markings on the PCB, the socket and the IC show to the same direction.

Performing a visual check

Perform a visual check after the assembly of the module and remove faults if necessary:

- Remove all loose parts, wire ends or drops of solder from the PCB. Remove all sharp wire ends.
- Check that solder contacts which are close to each other are not unintentionally connected to each other. Risk of short circuit!
- Check that all components are polarised correctly.

When you have remedied all faults, go on to the next part.

7. Connecting the WD-34

The decoder has terminal strips inserted to plug in and screw on the connecting wires. Make the connections one after the other:

- to the accessories
- the central unit and
- the power supply.

Power supply

You can supply the decoder either via the central unit or via a separate transformer according to the two following diagrams.

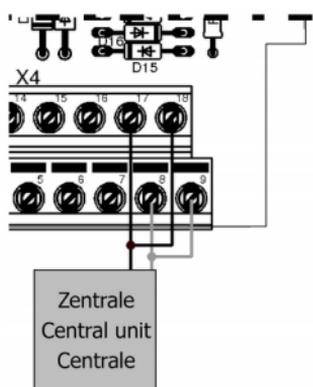


Fig. 2: Power supply via central unit


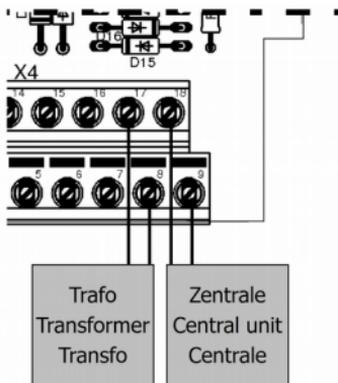


Fig. 3: Power supply via separate transformer

⚠ Caution: Switch off the central unit before connecting the decoder.

⚠ Caution: If a component gets too hot, disconnect the decoder and the power supply from the mains **immediately**. Possible short circuit! Check the assembly!

Pin connections points decoder WD-34

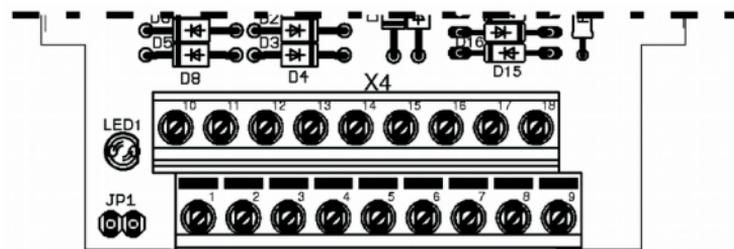

Connection	Points decoder WD-34
JP1	Programming jumper
X1	Solenoid accessory / points 2 "straight on"
X2	Solenoid accessory / points 2 return conductor
X3	Solenoid accessory / points 2 "branching"
X4	Solenoid accessory / points 4 "straight on"
X5	Solenoid accessory / points 4 return conductor
X6	Solenoid accessory / points 4 "branching"
X7	not in use
X8	Power supply / transformer (~)
X9	Input DCC signal / central unit
X10	Solenoid accessory / points 1 "straight on"
X11	Solenoid accessory / points 1 return conductor
X12	Solenoid accessory / points 1 "branching"
X13	Solenoid accessory / points 3 "straight on"
X14	Solenoid accessory / points 3 return conductor
X15	Solenoid accessory / points 3 "branching"
X16	not in use
X17	Power supply / transformer (~)
X18	Input DCC signal / central unit

8. Programming the WD-34

You can program the configuration variables (CV) using a DCC digital central unit. See the chapter in the manual of your central unit where the byte wise programming of configuration variables (CVs) is explained.

When using a Motorola central unit you can set the decoder address with a programming jumper. Changing the other decoder's features is neither necessary in layouts run in Motorola format only nor possible with Motorola central units.

Programming decoder and accessory decoder addresses

The decoder address is set in the configuration variables (CV) or by using the programming jumper. The accessory decoder address used to send the switching commands result from:

Decoder address x 4

= highest address of the quadruple accessory decoder address block

Name of CVs	CV-no.	Input value (Default)	Remarks and tips
Decoder address 1 to 63	1	1, 2, 3, ... 63 (1)	NB: In addition, you have to input the value "0" in CV#9.
Decoder address (64 to 510)	9	0, 1, 2, 3 ... 7 (0)	Please notice: You have to input a value in CV#1 as well.
Determining the input values for addresses higher than 64: 1. Divide the chosen address by 64. Round down the result to a whole number. Input this value in CV#9. 2. Multiply the value set for CV#9 multiply by 64. Subtract this result from the chosen address. Enter this value in CV#1.			Example: address 415: 1. $415 / 64 = 6,5 \rightarrow \text{CV}\#9 = 6$ 2. $415 - (6 \times 64) = 31 \rightarrow \text{CV}\#1 = 31$

Setting the address with a programming jumper

With Motorola central units the address can be set via a programming jumper only. When using DCC central units it is often easier to set the address via a programming jumper than to program it via CV.

In order to set the address via a programming jumper perform the following steps:

1. Bridge the two pins of the programming connector JP1, by putting on the jumper included in the package. Take it away as soon as the LED flashes.
2. Set one of the addresses from the quadruple accessory decoder address block you want to use for switching the connected accessories at the control unit (e.g. address "10" from the quadruple accessory decoder address block 9 – 12). Perform a switching command for the chosen address.
3. As soon as the LED goes out, the decoder has taken over the new address.

Programming the basic features

Name of CVs	CV-no.	Input value (Default)	Remarks and tips
Version	7	---	Read only!
Manufacturer	8	(62)	Read only!
Reset	8	0 ... 255	Any input value restores the settings in state of delivery.

Programming the configuration data for the WD-34

Name of CVs	CV-no.	Input value (Default)	Remarks and tips
On-time points 1	3	0, 1, 2 ... 255 (5)	In case the central unit sends a coil-off-signal, the on-time tallies with the minimal switching time. With central units not sending a coil-off-signal, the minimal switching time results from the duration of the switching impulse + on-time. For that reason the actual minimal switching time depends directly from the setting in CV#33.
On-time points 2	4	0, 1, 2 ... 255 (5)	
On-time points 3	5	0, 1, 2 ... 255 (5)	
On-time points 4	6	0, 1, 2 ... 255 (5)	

Configuration data 1	29	128, 136 (136)	RailCom off 128 RailCom on 136
----------------------	----	----------------	-----------------------------------

Advice: When RailCom is not used it is recommended to switch it off in CV#29.

Configuration data 2	33	0, 1, 2, 3 (0)	The input value has to be calculated by adding the numerical values assigned to the desired parameters.
			RailCom check on 0
			RailCom check off 1
			Central unit does not send coil-off 0 Central unit sends Coil-off 2

In standard operation the decoder checks directly after having been switched on if the booster for the connected section supplies a RailCom cutout. In case faulty detections are mounting the RailCom check should be switched off. This has no effect on the feedback with RailCom.

The central unit sending a coil-off-signal or not has direct effects on the on-time (see CV#3 to 6). In order to set the minimal switching time properly, it is important to set in CV#33 if the central unit in use sends this signal or not.

Examples for central unit **not** sending a coil-off-signal: Intellibox from Uhlenbrock, central units from Lenz.

Examples for central unit sending a coil-off-signal: MasterControl from Tams.

9. Check list for troubleshooting

- Parts are getting too hot and/or start to smoke.

-  Disconnect the system from the mains immediately!

Possible cause: one or more components are soldered incorrectly.
→ In case you have mounted the module from a kit, perform a visual check (→ section 6.) and if necessary, remedy the faults.
Otherwise send in the module for repair.

- The decoder does not work.

Possible cause: The connection of the decoder to the central unit and / or the power supply is interrupted. → Check the connections.

Possible cause: The connection of the decoder to the accessory or the points is interrupted. → Check the connections.

Possible cause: The central unit is not operating. → Check if the central unit is ready for operation.

Possible cause: The connected accessory or the connected points is defective. → Check the accessory or the points.

- After programming the address the decoder does not react to switching commands.

Possible cause: When programming the decoder address via CV you set the decoder address. To switch the decoder accessory decoder addresses are used. → Input the accessory decoder address to switch. (Advice: The decoder address multiplied with 4 tallies to the highest address from the quadruple accessory decoder address block. Example: decoder address = 10 → corresponding accessory decoder addresses: 37 to 40.)

Hotline: If problems with your module occur, our hotline is pleased to help you (mail address on the last page).

Repairs: You can send in a defective module for repair (address on the last page). In case of guarantee the repair is free of charge for you. With damages not covered by guarantee, the maximum fee for the repair is the difference between the price for the ready-built module and the kit according to our valid price list. We reserve the right to reject the repairing of a module when the repair is impossible for technical or economic reasons.

Please do not send in modules for repair charged to us. In case of warranty we will reimburse the forwarding expenses up to the flat rate we charge according to our valid price list for the delivery of the product. With repairs not covered by guarantee you have to bear the expenses for sending back and forth.

10. Guarantee bond

For this product we issue voluntarily a guarantee of 2 years from the date of purchase by the first customer, but in maximum 3 years after the end of series production. The first customer is the consumer first purchasing the product from us, a dealer or another natural or juristic person reselling or mounting the product on the basis of self-employment. The guarantee exists supplementary to the legal warranty of merchantability due to the consumer by the seller.

The warranty includes the free correction of faults which can be proved to be due to material failure or factory flaw. With kits we guarantee the completeness and quality of the components as well as the function of the parts according to the parameters in not mounted state. We guarantee the adherence to the technical specifications when the kit has been assembled and the ready-built circuit connected according to the manual and when start and mode of operation follow the instructions.

We retain the right to repair, make improvements, to deliver spares or to return the purchase price. Other claims are excluded. Claims for secondary damages or product liability consist only according to legal requirements.

Condition for this guarantee to be valid, is the adherence to the manual. In addition, the guarantee claim is excluded in the following cases:

- if arbitrary changes in the circuit are made,
- if repair attempts have failed with a ready-built module or device,
- if damaged by other persons,
- if damaged by faulty operation or by careless use or abuse.

11. EU declaration of conformity

 This product conforms with the EC-directives mentioned below and is therefore CE certified.

2004/108/EG on electromagnetic. Underlying standards: EN 55014-1 and EN 61000-6-3. To guarantee the electromagnetic tolerance in operation you must take the following precautions:

- Connect the transformer only to an approved mains socket installed by an authorised electrician.
- Make no changes to the original parts and accurately follow the instructions, connection diagrams and PCB layout included with this manual.
- Use only original spare parts for repairs.

2011/65/EG on the restriction of the use of certain hazardous substances in electrical and electronic equipment (ROHS). Underlying standard: EN 50581.

12. Declarations conforming to the WEEE directive

This product conforms with the EC-directive 2012/19/EG on waste electrical and electronic equipment (WEEE).



DE 37847206

The Tams Elektronik GmbH is registered with the WEEE-no. DE 37847206, according to. § 6 sect. 2 of the German electro regulations from the responsible authority for the disposal of used electro equipment.

Don't dispose of this product in the house refuse, bring it to the next recycling bay.

Information and tips:

<http://www.tams-online.de>

Warranty and service:

Tams Elektronik GmbH

Fuhrberger Straße 4

DE-30625 Hannover

fon: +49 (0)511 / 55 60 60

fax: +49 (0)511 / 55 61 61

e-mail: modellbahn@tams-online.de



DE 37847206