


Quick Installation Guide

AC750 Wireless Dual Band 4G LTE Router

Archer MR200

Connect the Hardware

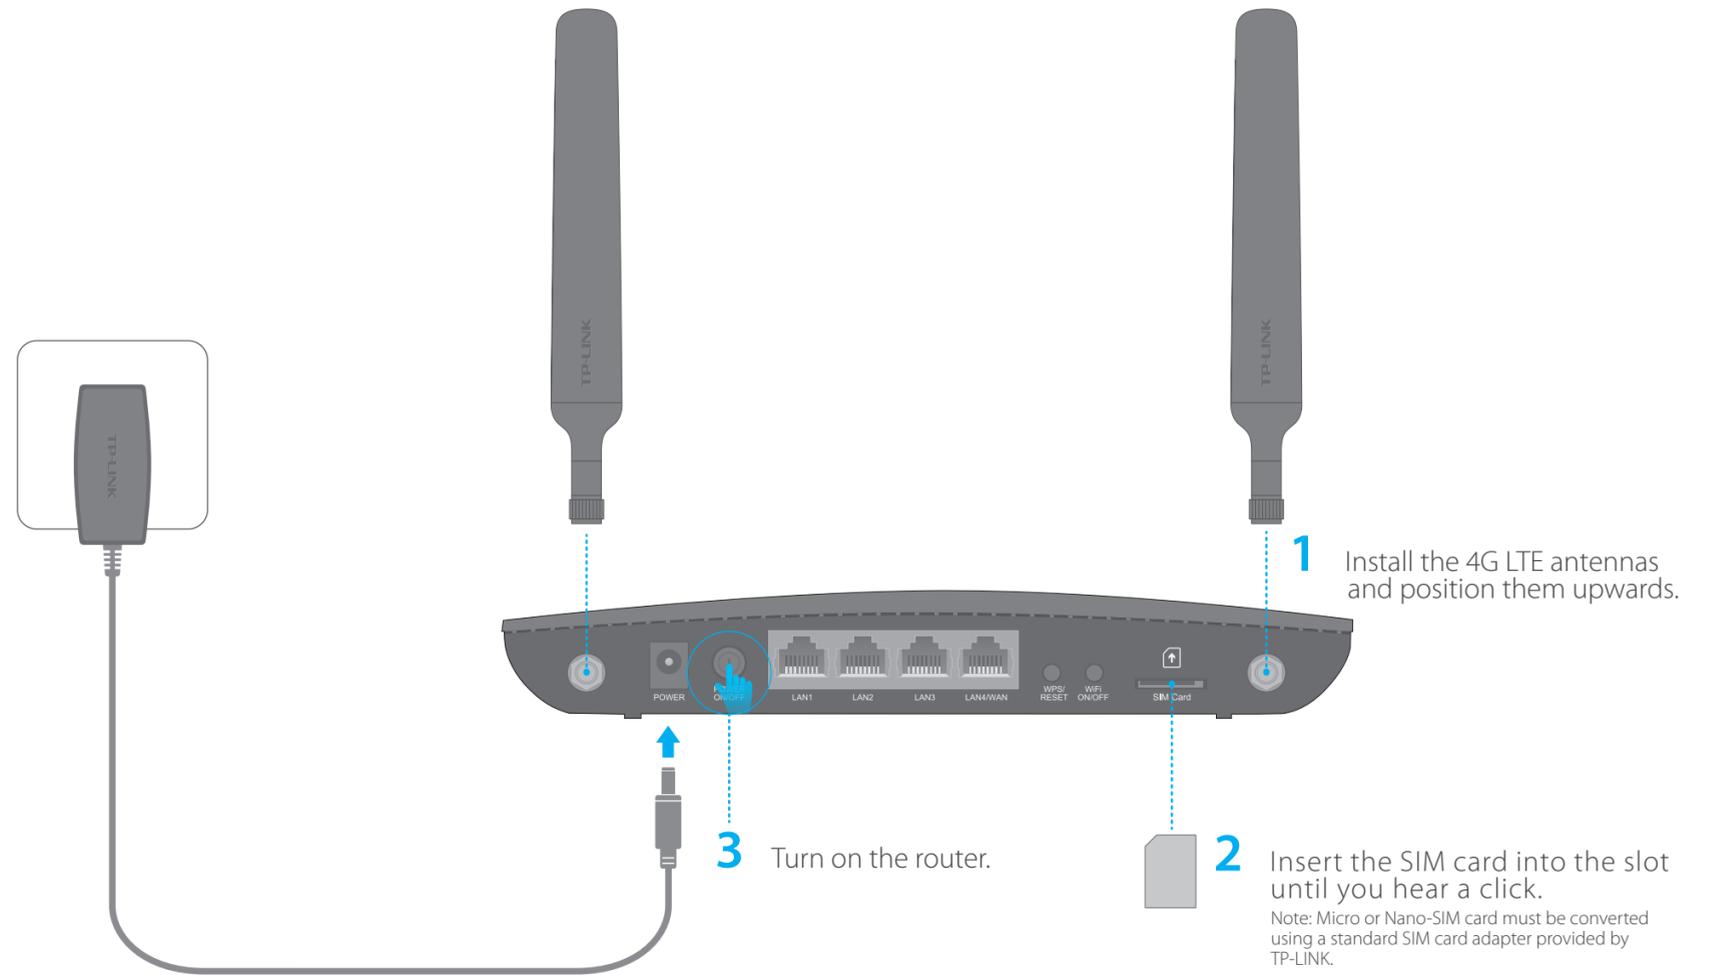

Verify the Hardware Connection

Verify the hardware connection by checking the following LEDs' status. If the Internet LED  is on, your router is connected to the Internet successfully.



For better Internet connection, make sure **3 to 4 bars** of the Signal Strength LED  are lit. Otherwise, relocate the router to a location that receives a strong mobile Internet signal, such as near a window.

Enjoy the Internet


Wired: Connect your computers to the router's LAN ports via Ethernet cables.

Wireless: Connect using the SSID (network name) and Wireless Password printed on the product label at the bottom of the router.




Customize the 4G LTE Router

1. Make sure your computer is connected to the router (via wired or wireless).
2. Launch a web browser and type in <http://tplinkmodem.net> or **192.168.1.1**. Create a new password (1-15 characters) and click **Save**.
Note: If the login page does not appear, please refer to FAQ > Q1.

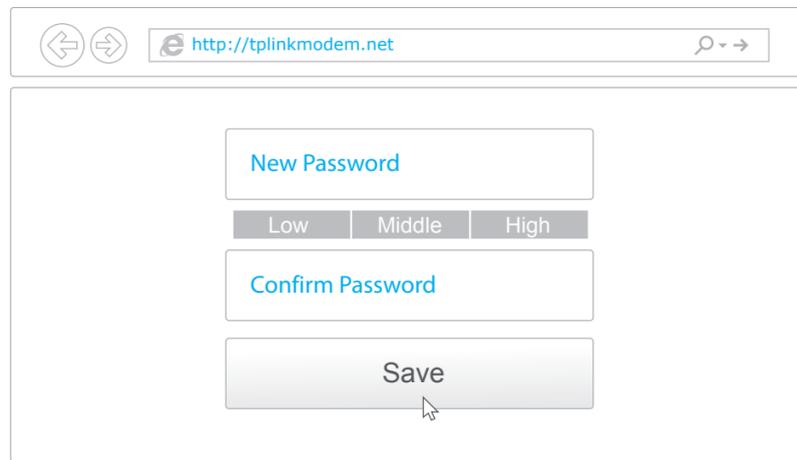

3. Enter the new password that you created and click **Login**.
Note: For subsequent logins, use your password that you have created.
4. Follow the step-by-step instructions of the **Quick Setup** to complete the initial configuration. On the Wireless Settings page, you can customize your 2.4GHz and 5GHz wireless network names and passwords.

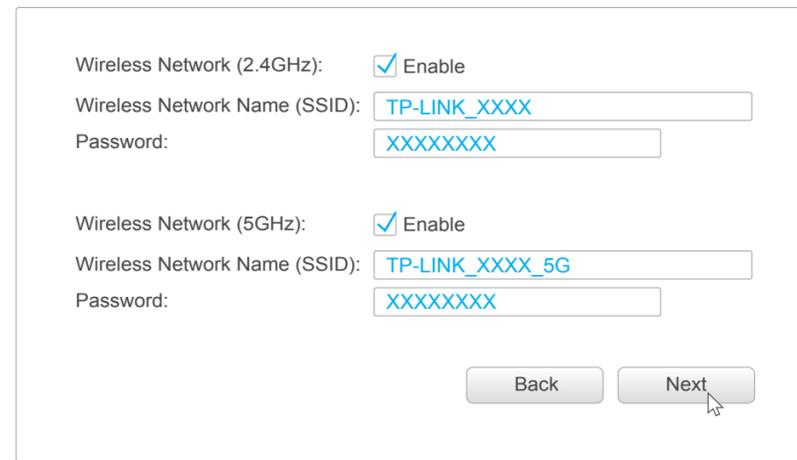

Note: The router can also be used (or configured) in Wireless Router Mode for ADSL/Cable connections. For more advanced configurations, please refer to the User Guide on TP-LINK official website at www.tp-link.com.

LED Indicators

LED	Status	Indication
⏻ (Power)	On	System initialization is complete.
	Flashing	System initialization or firmware upgrade is in process. Do not disconnect or power off the router.
	Off	Power is off.
🌐 (Internet)	On	Internet connection is available.
	Off	No Internet connection.
4G (4G)	On	The router is using the 4G network.
	Off	The router is using another network other than the 4G network.
📶 (Wireless)	On	At least one wireless radio band (2.4 GHz or 5 GHz) is enabled.
	Off	The wireless radio band is disabled.
📡 (LAN)	On	At least one LAN port is connected.
	Off	No LAN port is connected.
↻ (WPS)	On/Off	The LED stays on for no more than 5 minutes when a WPS connection is established, then turns off.
	Flashing	WPS connection is in progress. This may take up to 2 minutes.
📶 (Signal Strength)	On	Indicates the mobile Internet signal strength the router receives in the current location. More lit bars indicates a better signal strength.
	Off	No signal.

FAQ (Frequently Asked Questions)

Q1. What can I do if the login page does not appear?

- A1. Verify that the computer is set to obtain an IP address automatically from the router.
- A2. Verify that <http://tplinkmodem.net> or **192.168.1.1** is correctly entered in the web browser and press **Enter**.
- A3. Use another web browser and try again.
- A4. Reboot your router and try again.
- A5. Disable and enable the active network adapter and try again.

Q2. What can I do if I cannot access the Internet?

- A1. Verify that your SIM card is an LTE, WCDMA or GSM card.
- A2. Verify that your SIM card is in your ISP's service area.
- A3. Verify that your SIM card has sufficient credit.
- A4. Check the LAN connection:
Open a web browser and enter <http://tplinkmodem.net> or **192.168.1.1** in the address bar. If the login page does not appear, refer to FAQ > Q1 and then try again.
- A5. Check your ISP parameters:
 - 1) Open a web browser and log in to the web management page.
 - 2) Go to **Advanced > Network > Internet** to verify the parameters (including the APN, Username and Password) provided by your ISP are correctly entered. If the parameters are incorrect, click **Create Profile** and enter the correct parameters, then select the new

profile from the Profile Name list.

- A6. Check the PIN settings:
 - 1) Open a web browser and log in to the web management page.
 - 2) Go to **Advanced > Network > PIN Management** to verify if PIN is required. If it is, enter the correct PIN provided by your ISP or disable **PIN Lock**, and click **Save**.
- A7. Check the Data Limit:
 - 1) Open a web browser and log in to the web management page.
 - 2) Go to **Advanced > Network > Data Settings** to verify if the **Total Used** exceeds the **Total Allowance**. If it does, click **Correct** and set **Total Used** to 0 (zero), or disable **Data Limit**.
- A8. Check the Mobile Data:
 - 1) Open a web browser and log in to the web management page.
 - 2) Go to **Advanced > Network > Internet** to verify that **Mobile Data** is enabled. If not, toggle it **On** to access the Internet.
- A9. Check the Data Roaming:
 - 1) Confirm with your ISP if you are in a roaming service area. If you are, open a web browser and log into the web management page.
 - 2) Go to **Advanced > Network > Internet** to verify that **Data Roaming** is enabled. If not, toggle it **On** to access the Internet.

Q3. How do I restore the router to its factory default settings?

- A1. With the router powered on, press and hold down the **WPS/RESET** button on the rear panel of the router until the Power LED starts flashing. The router will restore and reboot automatically.
- A2. Log in to the web management page of the router, and go to **Advanced > System Tools > Backup & Restore**, click **Factory Restore** and wait until the reset process completes.



WPS/RESET Button - Press and hold until the Power LED starts flashing.

Q4. What can I do if I forget my web management page password?

- A. Refer to FAQ > Q3 to restore the router and then set a new password using 1-15 characters.

Q5. What can I do if I forget my wireless network password?

- A1. The default Wireless Password is printed on the product label of the router.
- A2. If the default Wireless Password has been changed, log in to the router's web management page and go to **Basic > Wireless** to retrieve or reset your password.